

# **SOLAR VOTIVE- INSTRUCTIONS**

## **Congratulations on the purchase of your Solar Votive by Allsop Home & Garden**

### **Parts:**

1. Hand-blown glass vessel
2. Top with embedded solar panel
3. Rotating On/off dial- located on bottom side of glass top
4. 1 AAA Ni-MH rechargeable battery (included and installed)
5. Photo light sensor

### **Assembly:**

Solar Votives come pre-assembled but need to be activated before use. This can be accomplished in several easy steps:

1. Pick up Solar Votive with two hands. Locate the top of the solar votive; carefully twist the top with embedded solar votive clock wise while holding the hand-blown glass vessel stationary.
2. Remove the top with embedded solar panel from hand-blown glass vessel.
3. Locate rotating on/off dial on bottom side of glass top. Turn dial clockwise from “off” to “on” position. Leave the dial turned to the “on” position at all times. This will ensure that your Solar Votive is collecting energy and storing it in the AAA battery.
4. Carefully screw top back onto hand-blown glass vessel and ensure that top is secure to vessel

Enjoy! Due to the hand-blown glass nature of Solar Votives, each votive is completely unique, there are no two votives exactly alike!

\*\* Note: If the AAA battery is not collecting energy the LED light may not glow for this reason. The battery in your Solar Votive may need to be changed. To do this, remove the top from the hand-blown glass vessel. Locate small screw on the bottom side of the top which secures battery housing lid. Remove small screw and remove plastic battery housing cover. Remove AAA Ni-MH rechargeable battery and replace. Put battery cover back with small screw and fasten solar housing compartment/ top back onto hand-blown glass vessel. Please recycle your AAA Ni-MH rechargeable battery.

Allsop Home & Garden

[www.allsopgarden.com](http://www.allsopgarden.com)

[garden@allsop.com](mailto:garden@allsop.com)

1-866-425-5767